


Heatsaver Flue Kit Installation Instructions For Solid Fuel Appliances

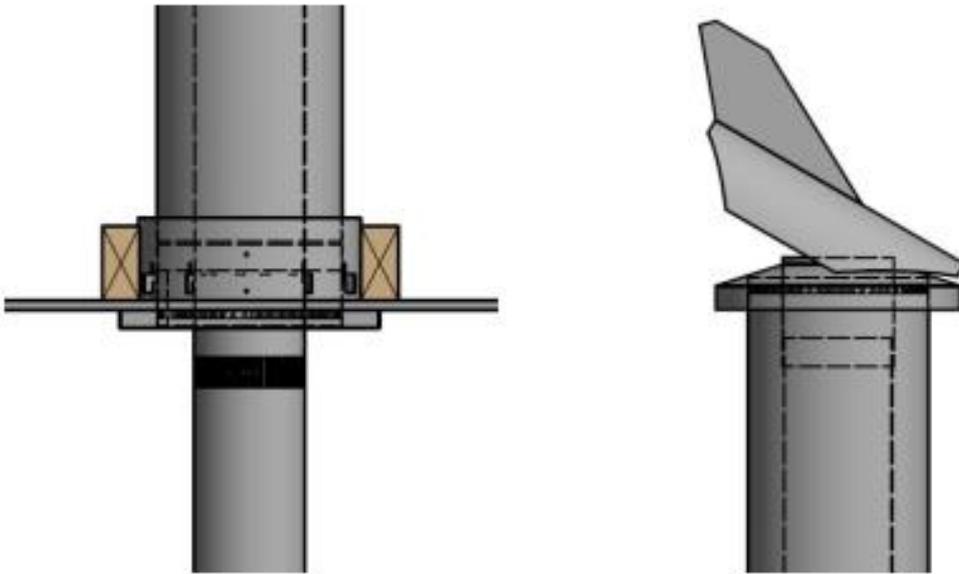

The installation of any Woodsman solid fuel burner requires a Building Consent prior to installation commencing. We recommend the installation of a solid fuel burner or flue system be undertaken by the holder of a current SFAIT (Solid Fuel Appliance Technician) qualification issued by the NZHHA (New Zealand Home Heating Association) www.nzhha.co.nz

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

Proudly Manufactured By:



Harris Home Fires
41 Braddon St
Addington
Christchurch 8024
New Zealand
Email sales@hhf.co.nz

P O Box 4043
Christchurch 8140
New Zealand

Phone 03 366 1796
Freephone 0800 3661796
Fax 03 366 1795

Installation Instructions

We recommend this appliance be installed by a trained and NZHHA qualified installer.

Warning: the appliance and flue system shall be installed in accordance with AS/NZS 2918 and the appropriate requirements of relevant building code/codes.

Caution: mixing of appliance or flue system components from different sources or modifying the dimensional specification of components may result in hazardous conditions. Where such action is considered, the manufacturer should be consulted in the first instance.


Minimum Flue Height

The top of the flue system should be at least 600mm above the highest point of the roof ridgeline, if the point of intersection of the flue system and the roofline is less than 3 metres from the ridgeline horizontally.

If the point of intersection of the flue system and the roofline is greater than 3 metres horizontally, the top of the flue system shall be at least 1 metre above the point of intersection with the roofline. (refer FIG 3)

FIG 3.

DIMENSIONS IN MILLIMETRES

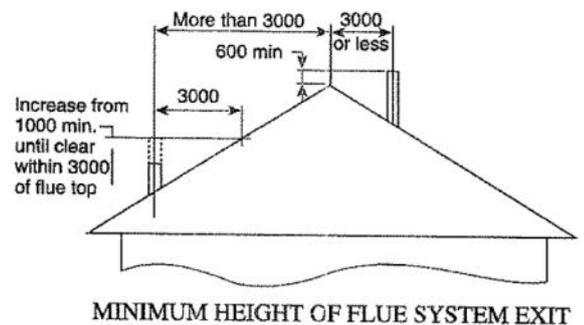

These are considered to be **minimum dimensions**, and depending on local conditions, **taller flue system heights may be required for satisfactory performance. The total flue height should be no less than 4.6m from the level of the hearth.**

Flue Installation Detail

Your Woodsman appliance should be installed with a HeatSaver Flue System.

A HeatSaver Flue System is available from all authorised Woodsman dealers throughout New Zealand.

The HeatSaver Flue System contains a complete installation drawing and correct clearances from the ceiling level up. Minimum clearances from the appliance to nearby combustible surfaces are given in FIGS 2 & 3.

Use of a flue system other than a genuine HeatSaver Flue System may affect the safety of the installation, and may affect your warranty.

Insist on a genuine HeatSaver Flue System.





HeatSaver Flue Kit Installation



INSTALLATION INSTRUCTIONS


- This HeatSaver flue system is tested and certified to AS/NZS 2918:2001 Appendix F, which means it is approved for use on all solid fuel appliances with a flue diameter of 150mm.
- A copy of the Laboratory Test Certificate for this HeatSaver Flue System is included as part of these Installation Instructions, (refer to paperwork with flue kit).
- Installation of any solid fuel appliance should only be carried out by suitably trained and qualified personnel.
- Position the stove to the desired position, always ensuring that the manufacturer's minimum clearances to combustibles are complied with.
- Check that there are no roofline ridges or valleys in the way, or if they cannot be avoided, that the installer knows how to weatherproof the penetration and reinstate the full strength of the structure.
- At the ceiling level, construct a square frame of 300mm x 300mm internal dimensions and cut away the ceiling materials from the inside of this frame.
- Lower the 300mm flue pipe casing into this frame and nail in place when the bottom edge is 25mm below the ceiling level and the 8 nail holes provided are touching the timber frame. Ensure that the spacer brackets are at the top of the casing as shown in the diagram.
- Check all 4 locating brackets are correctly fitted into the 300 X 150mm short casing and lower the 250mm diameter lower casing into place. The swage will naturally settle onto the 4 brackets supporting the casing.
- Make roof penetration, assemble and fit required flue length and install with upper casing. Secure all joints with at least 3 stainless steel rivets or self tapping screws.
- Frame and brace upper installation as required and flash the roof to shield penetration.
- Fit ceiling plate to ceiling.
- When trimming the stainless steel flue length, remember to allow for expansion when flue is hot.
- Fix HeatSaver Columbia Cowl in place using 3 screws.
- Secure the flue to the fire, drill through flue neck on fire and secure with 2 to 3 s/s screws or rivets.
- All flue joints should be sealed using a flue cement.
- Ensure a 25mm clearance from the 250mm diameter casing to any combustible material.

HEAT SAVER II FLUE KIT

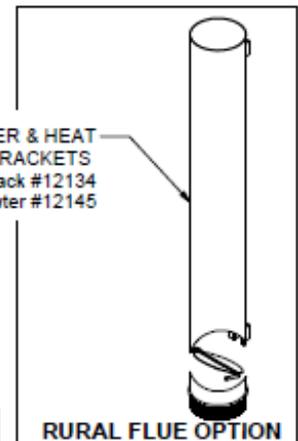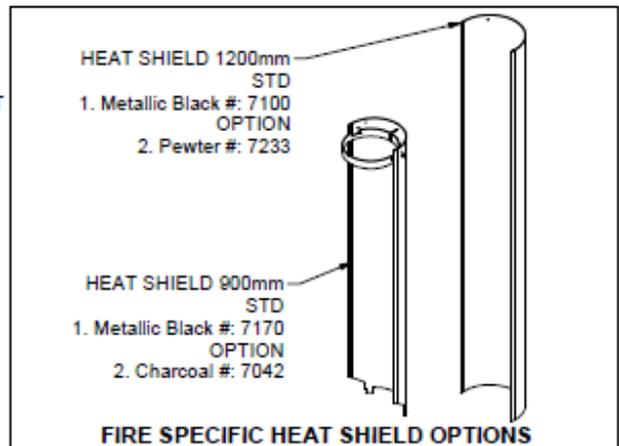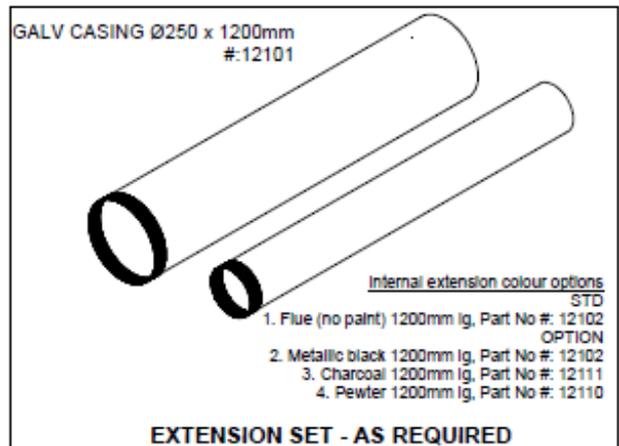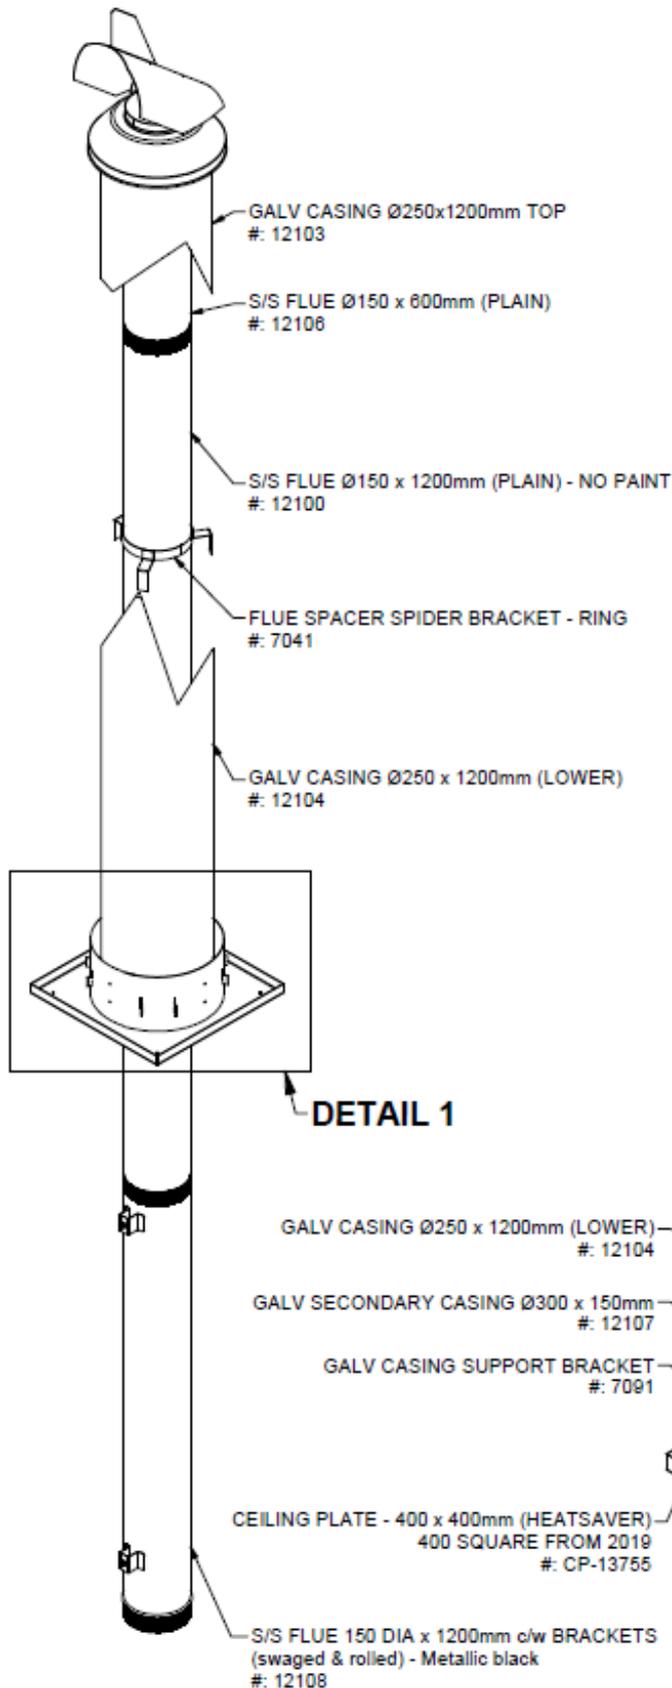


DETAIL 1

Standard Ceiling

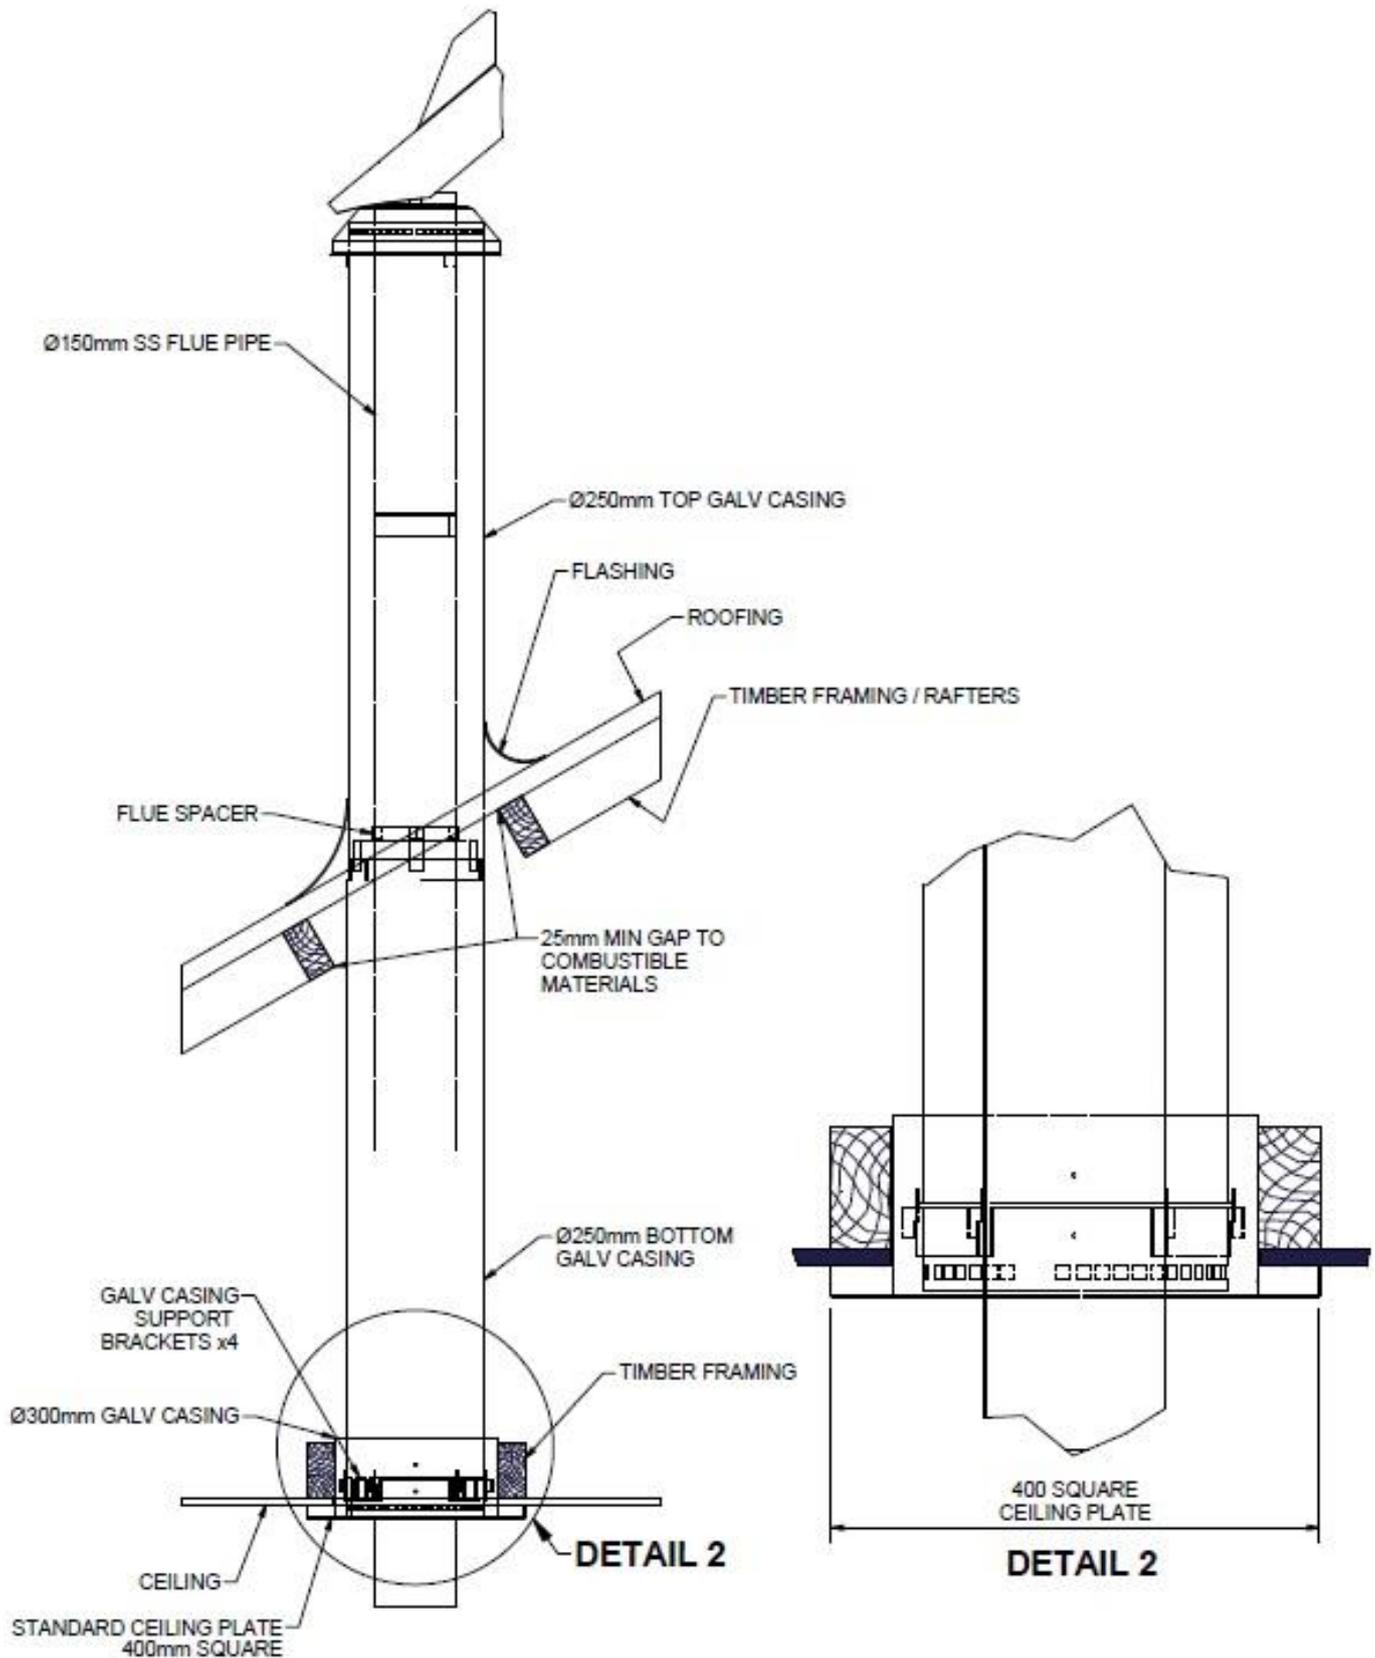


HeatSaver Flue Kit Installation With Sloping Ceiling Kit

No Cavity (Requires Sloping Ceiling Kit)

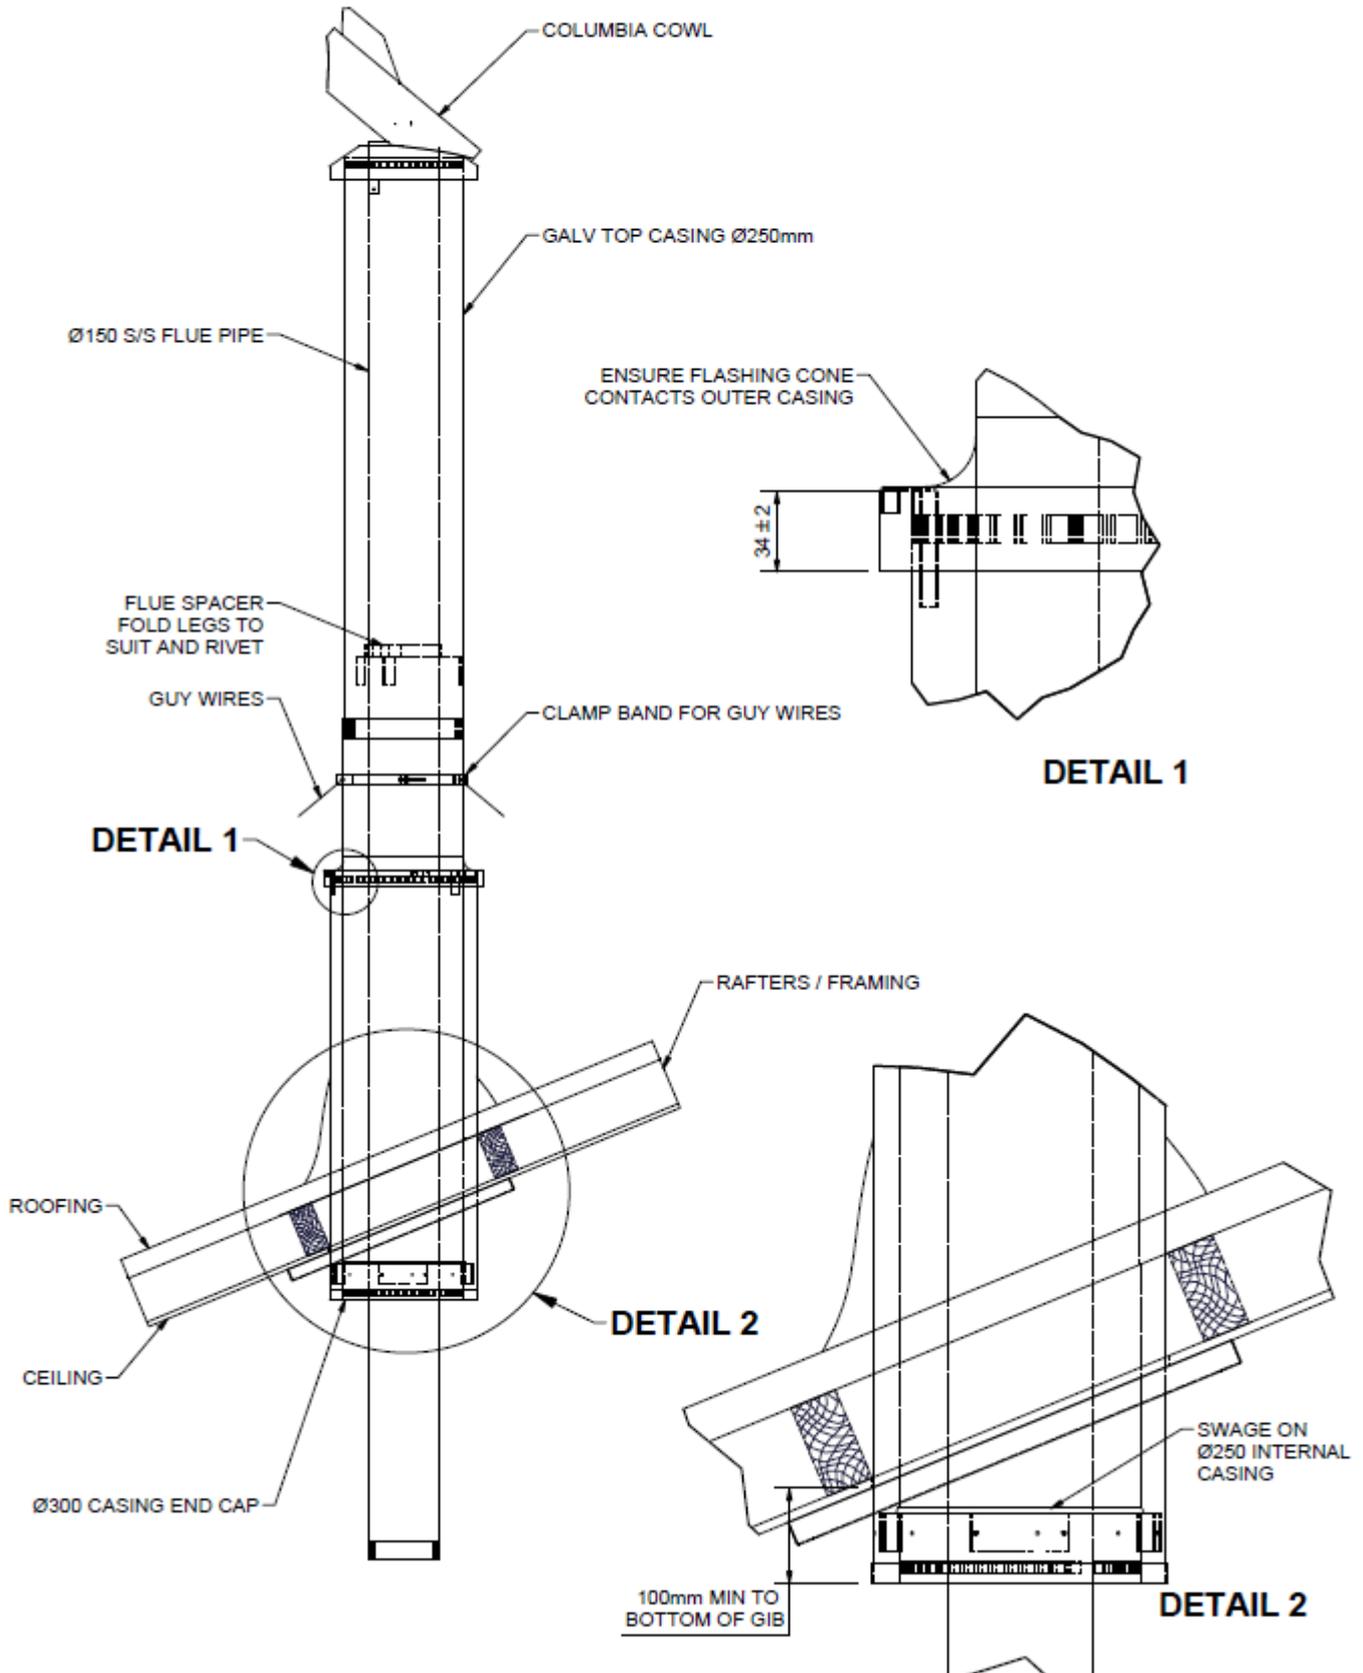

HeatSaver Flue Kit Installation Two Story Penetration Kit

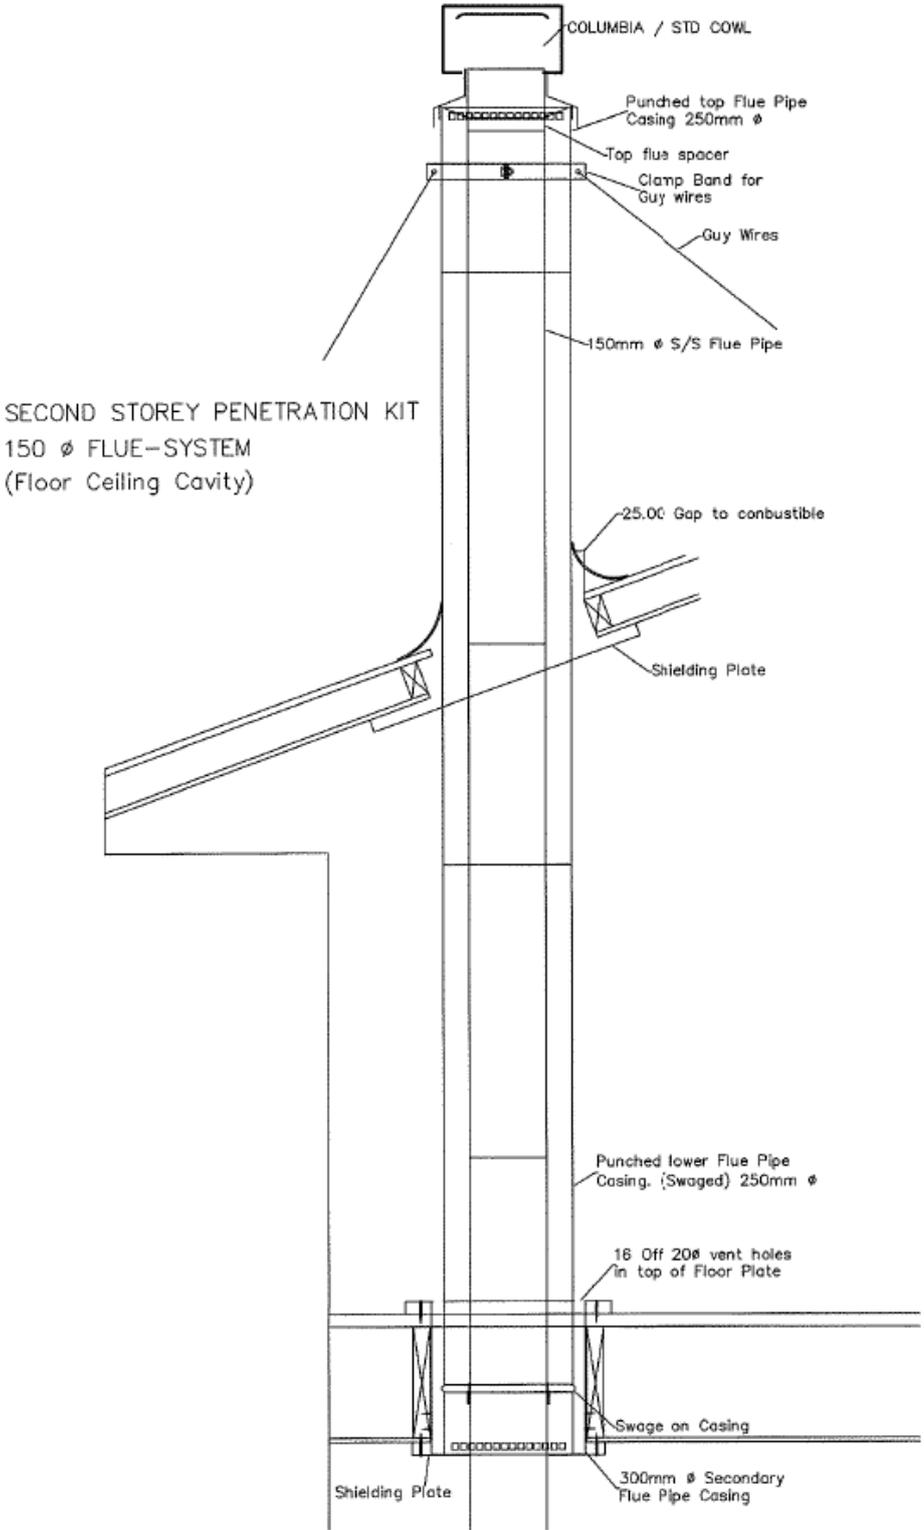

IMPORTANT

All Flue Joints Are Required To Be Sealed Using Flue Cement


It is extremely important that ALL flue joints are sealed at the time of installation using flue cement or a suitable exhaust cement.

Woodsman fires are designed and tested with all flue joints sealed.

If flue joints are not sealed properly, it can lead to performance issues with the fire such as;

- Lower heat output of the fire, due to decreased performance
- Blocked flue
- Smoke coming out the door when open, due to decreased suction
- Hard to light

The formation of soot and creosote will not seal the flues, especially on the lower lengths, as the high temperatures inhibit its formation.

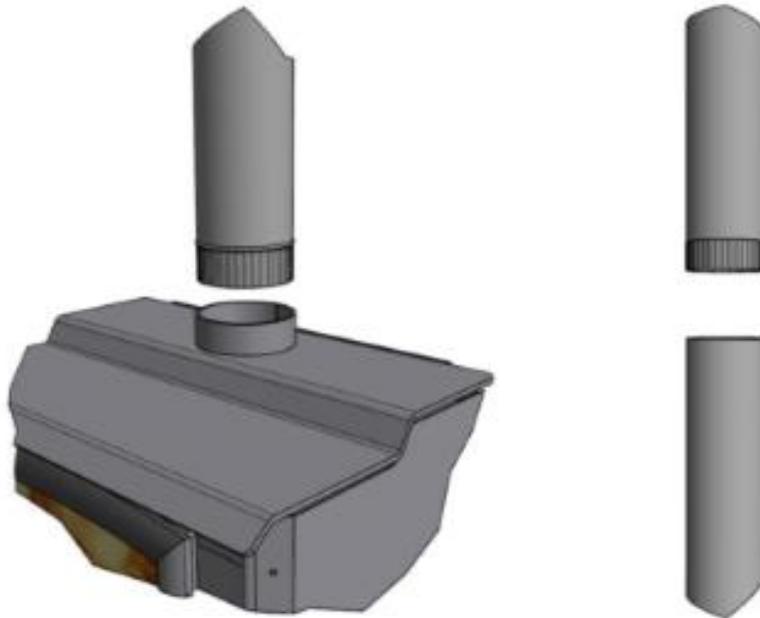


Note:

Any issues that arise as a result of the flues not being sealed, are not covered by the warranty and are not the responsibility of the manufacturer. It is the installer's responsibility that this is done at the time of installation.

Columbia Cowl

Your Columbia Cowl should be assembled as below. Please note the position of the fibre washer. Tighten the lock nut up so that there is the minimum amount of vertical play (around 1mm), but the cowl still rotates freely.

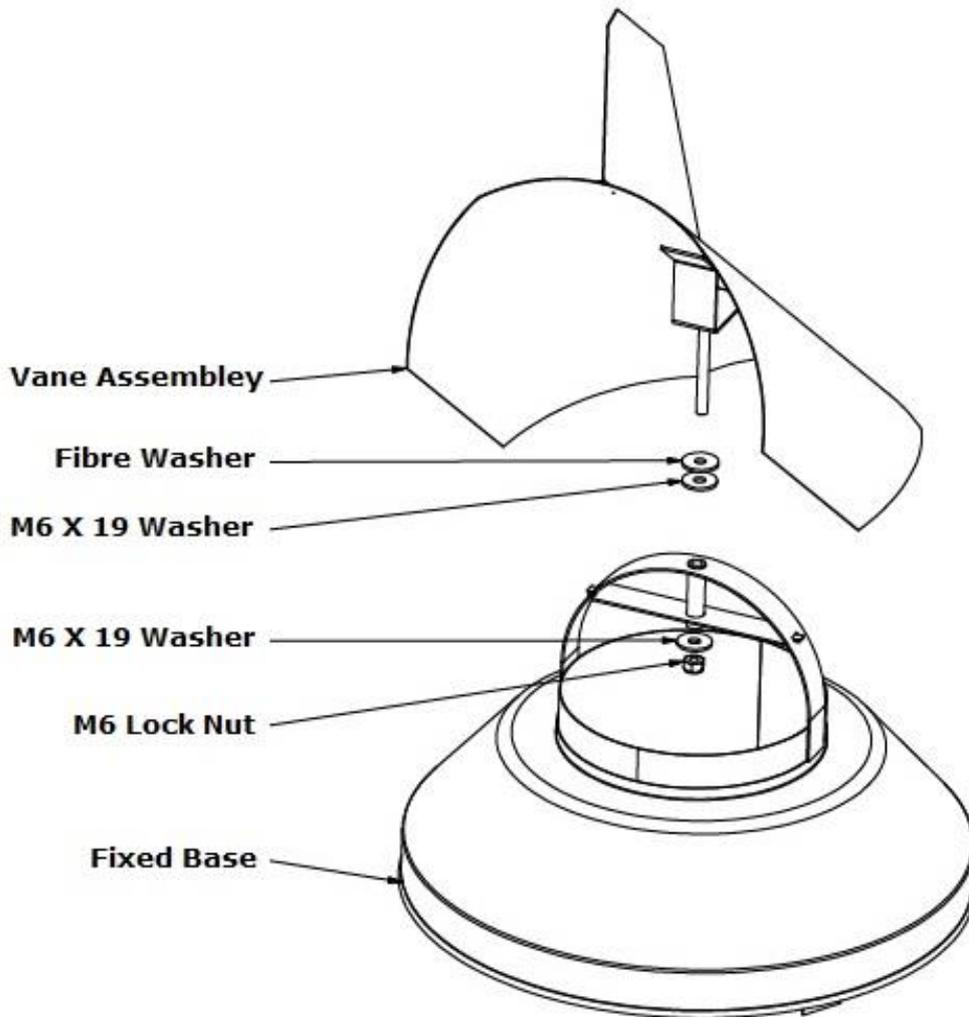


Maintenance

Your Columbia Cowl should have routine maintenance carried out yearly. Disassemble the cowl and clean away any built up soot or creosote. Check the fibre washer for wear and replace if necessary. Apply fresh high temperature grease to the shaft and reassemble.

Rural Flue Option

If you are on a property of 2 Ha or more or local regulations permit, you have the choice of installing the Rural Option for the Standard heat Saver Flue system. This is simply the standard Heat Saver Flue system with the optional piece of 150 X 1200 mm stainless flue length with butterfly damper supplied as standard. This piece is fitted directly into the spigot of the fire in place of the standard flue pipe. The factory shield is fitted as normal.

Alternatively you can purchase the optional piece of 150 X 1200 mm stainless flue length with butterfly damper fitted separately, and fit it to an existing Woodsman Wood Burner if local regulations permit.

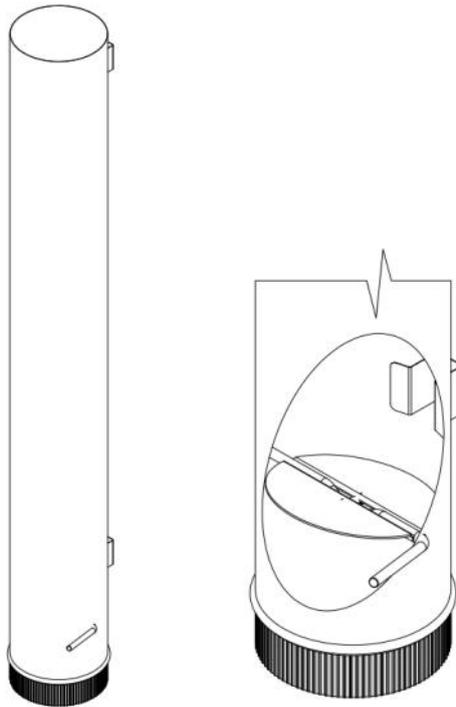

Rural Flue Damper operating suggestions:

- 1) Your Woodsman fire must always be started with the flue damper fully open.
- 2) Once the fire has been burning for some time, and the home has been fully warmed, the damper may be used for long holding operation. This is useful for leaving the home for a few hours or overnight burning.
- 3) Turn the handle so that it sits 45 degrees to the top of the fire for a slow burn and turn to vertical (open) for maximum performance and heat output. It is not recommended to close the damper past 45 degrees particularly in a newer air tight home.
- 4) To ensure efficient burning it is advised to leave the damper open for 10mins after each new load of wood is added.

Caution:

- 1) Always ensure the damper is open before opening the fire door.
- 2) Using the fire with the damper turned down too often, will cause the flue system to block quickly and will require cleaning regularly.
- 3) When the fire is operating, the damper handle should never be touched with bare hands as it will be very hot. Use an oven mitt or tool.
- 4) Operating the flue damper before the fire is not fully warmed up will prevent the fire from reaching correct operating temperature resulting in low heat output and possibly other performance issues.

Fitting Factory Flue Shields

Your HeatSaver Flue System comes standard with a factory flue shield of one of 2 types;

900mm high, contains 1x painted metal strap. This is used for the Woodsman ECR, Blaze, Boston, Manhattan, RMF and Milford.

1200mm high, this is suitable for the Woodsman Brunner, Tasman, Aspen, Tarras, Serene, ECR NoVo. Strongman and other branded fires which can use the 1200 high single heat shields.

Fitting the 900mm High Flue Shield

- 1) The heat shield has 2 'tabs' at the bottom which corresponds to 2 slots on the fire behind the flue neck. Insert the tabs.
- 2) Take the metal strap and fold the two ends around the flue until they meet at the back of the flue at about the height of the top of the heat shield.
- 3) Hold both ends together and push the tabs through the single slot at the back of the heat shield and fold out the tabs to secure in place.

Fitting the 1200mm High Flue Shield

Your lower length of painted flue already has 2 location brackets attached.

- 1) Ensure these brackets are facing towards the back wall and centralized.
- 2) Secure the flue shield in place with screws.



1200mm Flue Shield



900mm Flue Shield

***IMPORTANT** - Flue shields should be no further than 10mm off the top of the firebox*

Customer: W.H. Harris Ltd.
41 Braddon St.
P.O. Box 4043
CHRISTCHURCH

COPY

P701/1

Accreditation

Laboratory Registration Number 395

This laboratory is accredited by International Accreditation New Zealand (IANZ). The tests reported herein have been performed in accordance with the terms of our accreditation. This accreditation does not extend to any opinions or any interpretations of test results contained in this report.



IANZ has a Mutual Recognition Arrangement (MRA) with the National Association of Testing Authorities (NATA), Australia, such that both organizations recognize accreditations by IANZ and NATA as being equivalent. Users of test reports are recommended to accept test reports in the name of either accrediting body.

Compliance Certificate

Appliance: HeatSaver 150 mm Diameter Flue Kit

Test Standard: AS/NZS2918:2001 Appendix F

Full Report: 02/749R

(The full report contains the information on the test methods, details of the appliance tested and the results of the test)

This report:

Prepared by: W. S. Webley

W.S. Webley

Approved by: W. S. Webley

W.S. Webley

Release Date:

2/3/09

This report must not be reproduced except in full. Results are based on material and information supplied by the client. Applied Research Services Ltd shall not be liable in respect of any loss or damage (including consequential loss or damage) resulting from the use of reports prepared by them. Results issued in electronic form are subject to confirmation by issue of final report.